



Okayo EarMe instruction manual


0. Battery warning ⚠

- Charge the unit fully before first use.
- Charge the unit always when the battery level is below 50%.
- Stop usage if you notice the unit overheating or if you experience battery damage. Contact the vendor.




Before long-term storage make sure that the battery charge is 50%, and charge the units every three months. **Completely discharging the battery may cause permanent damage to the device.**

1. Interface

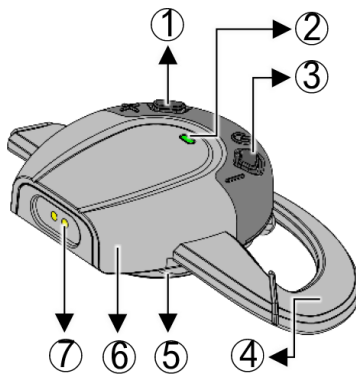

ME1 Receiver

- ① Volume up (+)
- ② Signal/ battery/ charging indicator
- ③ Power button (⏻)
Volume down (-)
- ④ Ear holder
- ⑤ Speaker (HAC)
- ⑥ Built-in battery
- ⑦ Magnetic charging terminals

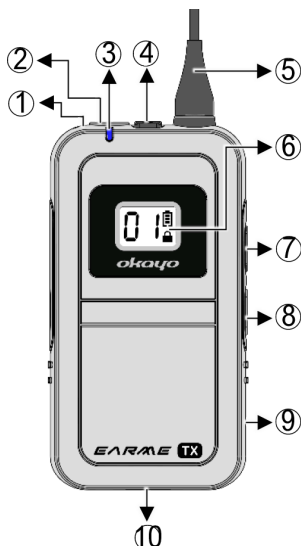

ME1T Transmitter


- ① Built-in microphone
- ② Microphone in 3,5 mm (TS)
- ③ Signal/ battery/ charging indicator
- ④ Power/ volume down button (⏻)
- ⑤ Antenna
- ⑥ Display
- ⑦ Up arrow (+)
- ⑧ Down arrow (-)
- ⑨ Built-in battery
- ⑩ USB-C charging port

2. General operations

Turning the unit on (applies to ME1T transmitter and ME1 receiver)

Press and hold the power button  for one second to turn the unit on.

Turning the microphone on (applies to ME1T transmitter)

A short press of the power button  causes the microphone on the ME1T transmitter to deactivate (mute) or activate.

Then the transmitter diode:


- blinks slowly this means that the unit is muted
- is constantly on, the microphone is on.

Adjusting receiver volume (applies to ME1 receiver)

Press the up + or down – arrow to adjust receiver volume.

Note! Listening to music at loud volumes over a longer period of time may cause hearing damage!


Muting the unit (applies to ME1T transmitter and ME1 receiver)


Press and hold the power button  for two seconds to turn the transmitter off. In addition, the ME1 receiver will shut down automatically if:


- the transmitter is shut down earlier, or
- if it does not receive a signal from the ME1T transmitter for five minutes


3. Equipment pairing before tours


 Before a tour, make sure that all members (units) are paired.

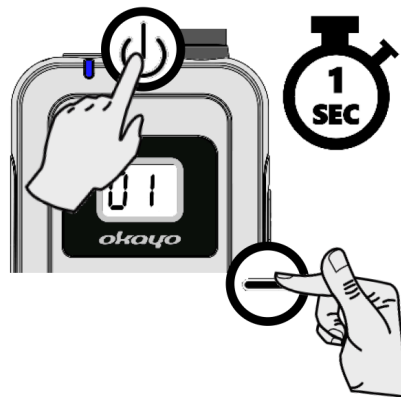

STEP 1. Press and hold the power button  and the down arrow at the same time for one second, to turn on the ME1T transmitter.

STEP 2. Within 5 seconds of turning on the transmitter, select a channel using the up button + or down button – and then confirm by pressing the power button .


STEP 3. When the signal indicator on the ME1T transmitter starts to blink quickly, turn on the ME1 receiver (hold the power button  for one second) in order to pair them.


STEP 4. Quit pairing mode by pressing the power button  on the ME1T transmitter.

4. Adding group members (pairing additional receivers) during a tour




STEP 1. Press and hold the down arrow – for two seconds, until the LED on the ME1T transmitter starts to blink quickly.

STEP 2. Turn on the ME1 receiver (to turn the receiver on, press and hold the power button  for one second).

STEP 3. Quit the tour member adding mode by pressing the power button  on the ME1T transmitter.

5. Low battery level

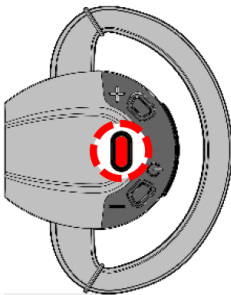


If during a tour the ME1 receiver shows the red LED, charge the unit as soon as possible.



If a low battery indicator shows, charge the ME1T transmitter as soon as possible.

- Red LED
- One battery indicator block


6. Checking battery levels when the receiver is off

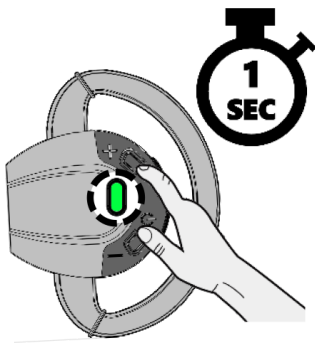

In order to quickly check the battery condition on the ME1 receiver if it is OFF, press and hold the volume up + and volume down – button simultaneously.

Green diode on	75% ↑
Green diode blinking	50% ~ 75%
Green and red diodes blinking in alternate	25% ~ 50%
Red diode on	25% ↓

7. LED

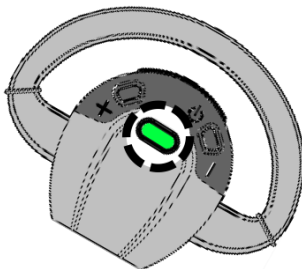

LED status	ME1 receiver
Green	Full power
Red	Low power (5% ↓)
Continuous	Grouped (paired)
Blinking slowly	Not paired
Blinking quickly	Searching for transmitter



LED status	ME1T transmitter
Blue	Full charge
Red	Low power
Continuous	Unit on
Blinking slowly	Muted
Blinking quickly	Receiver pairing in progress

8. Improving microphone sensitivity on the ME1T transmitter



STEP 1. On the transmitter press and hold the up + button, until the display shows 02 .

STEP 2. By using the up + or down – buttons, select symbols between U1 and U5 on the display; these indicate microphone sensitivity (U1 meaning lowest, U5 highest).

STEP 3. After selecting the symbol (microphone sensitivity), the ME1T transmitter will automatically return to the main display.

9. Connecting the transmitter to an external sound source



In order to play back additional information to the members using an external audio player, proceed as described below to set the AUX level on the ME1T transmitter in order to achieve best results.



STEP 1. On the transmitter press and hold the up + button for two seconds, until the display shows U2 .

STEP 2. Press the down button – to select the symbol AU .

STEP 3. After these settings, the ME1T transmitter will automatically return to the main screen.

10. Remote channel changes in all receivers during a tour

⚠ In case of interference it is advisable to pick a new channel.

⚠ The function is not available if an external sound source (AUX function) is connected to the transmitter




STEP 1. On the ME1T transmitter, press simultaneously the up + and down – buttons, to unlock the channel. The padlock symbol will disappear from the display.


STEP 2. Pick another channel using the up + or down – buttons. After the selection, the new channel will be locked automatically.

STEP 3. Afterwards, all group members (all receivers) will be automatically moved to the new set channel.

STEP 4. When all receivers show lit LEDs, this means that the channel change was successful.

11. Remotely ending the tour

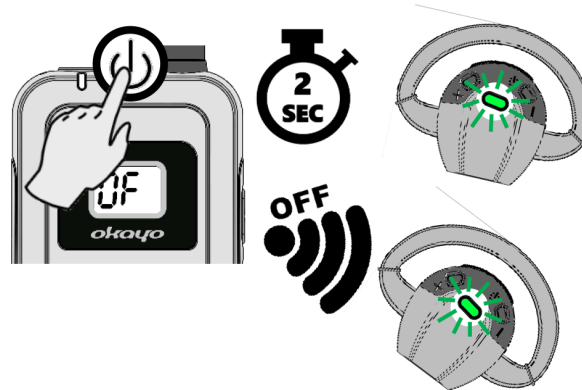

The receivers of all group members will be remotely shut down when the ME1T transmitter is shut down by pressing and holding the power button  for two seconds. The LEDs on the ME1 receivers will blink twice and then shut off.

12. Troubleshooting

Q: Why cannot the content transmitted by the ME1T be heard on the ME1 receiver?

A: Check as follows.

- Check whether the ME1 receiver is on.
- Check whether the LED on the ME1 receiver blinks continuously to make sure that the ME1 is synchronised and belongs to the group (is properly paired).
- Check whether the loudness on the ME1 receiver is set correctly.
- Check whether the ME1T transmitter is not muted (if so, the LED on the ME1T transmitter will blink slowly).

Q: Why is the volume on the ME1T transmitter so low?

A: Check as follows.

- Check if the microphone sensitivity is set correctly.
- Check whether the external microphone is not damaged.

13. Service and distribution



MEXPO
Kazimierza Pułaskiego 8
81-368 Gdynia, Poland

+48 58 550 10 25
www.systemtourguide.com
biuro@systemtourguide.com